
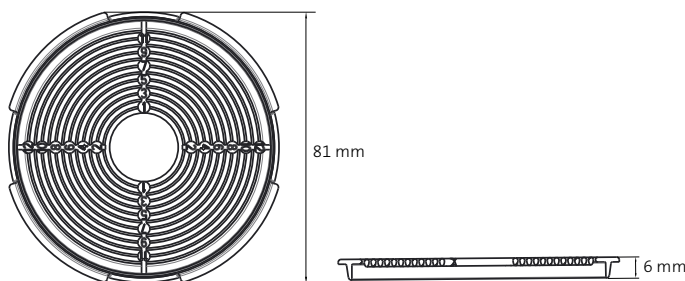


# AIR EXCELLENT

## The 12-stage air flow restrictor

The air restrictor helps to set the required air capacity per duct run between distribution boxes, the valves and/or grills. The setting of the multiple restrictors in a ventilation system is determined by a ventilation calculation. The air flow restrictor is placed inside the distribution box and can be removed or altered due to system changes or cleaning purposes. The rings inside the flow restrictors can be easily taken out by cutting.

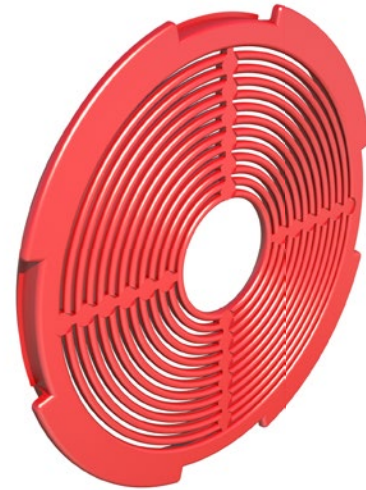

		Qv [m <sup>3</sup> /h]					
Ring(s) removed	Zeta [-]	10	20	30	40	50	60
		Δp [Pa]					
0	20.01	4.5	17.9	40.2	71.5	111.7	160.9
1	15.98	3.6	14.3	32.1	57.1	89.2	128.5
2	12.45	2.8	11.1	25.0	44.5	69.5	100.1
3	9.41	2.1	8.4	18.9	33.6	52.5	75.7
4	7.32	1.6	6.5	14.7	26.2	40.9	58.9
5	5.30	1.2	4.7	10.7	18.9	29.6	42.6
6	3.63	0.8	3.2	7.3	13.0	20.3	29.2
7	2.62	0.6	2.3	5.3	9.4	14.6	21.1
8	1.82	0.4	1.6	3.7	6.5	10.2	14.6
9	1.24	0.3	1.1	2.5	4.4	6.9	10.0
10	0.77	0.2	0.7	1.5	2.8	4.3	6.2
11	0.41	0.1	0.4	0.8	1.5	2.3	3.3
12	0.18	0.0	0.2	0.4	0.6	1.0	1.4